


Skinnelås • Awning safty device
Zeltriegelung • Tentzekering
Affermissement d' Auvent • Kederlistlås

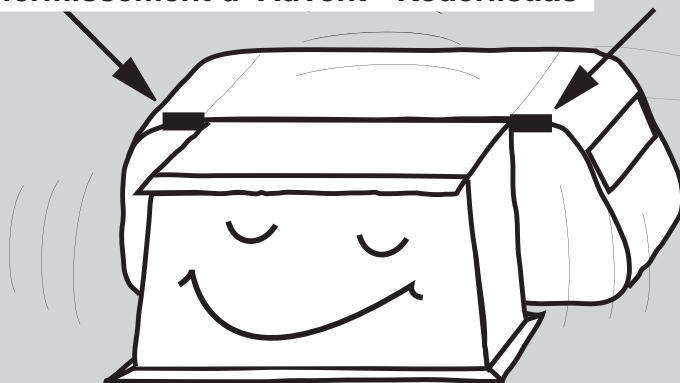

60040

© 1991 Jydsk Camping Industri A/S DK 7100 Vejle

1




Skud Safe Lock i vogens alu-skinne helt op til teltsiden !!

Schieb den Safe Lock in die Alu-Schiene des Wagens bis zur Zeltseite !!

Slide the Safe Lock into the caravan channel up to the awningside !!

2

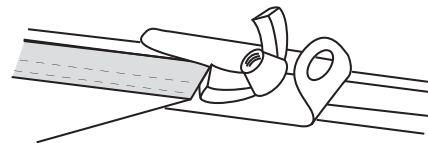

Skub Safe Lok's V-formede slids ind omkring teltvulsten og spænd fast.

Der Schlitz im Safe Loks über dem Zeltkeder schieben und zuspannen.

Push the Safe Lok's V-shape over the beading and tighten it.